SOUTHERN SHUTTER COMPANY

1-800-344-8590

www.southernshutter.com

sales@southernshutter.com

Since 1964 Southern Shutter Company has grown into one of the nation's leading wholesale manufacturers of functional wood shutters.

Southern Shutter recently upgraded our production capabilities with the latest manufacturing technology to produce wood shutters that will last a lifetime with proper maintenance. These enhanced capabilities allow almost unlimited custom options for customers to design and add a personal touch to their shutters. No other company offers as many shutter styles, custom options and wood species to supply our customers with the finest quality wood shutters.

Contact your Southern Shutter dealer for any questions about our products, custom options or price quotes.

email: sales@southernshutter.com

Proudly Distributed by:

SOUTHERN SHUTTER COMPANY

MEASURING & INSTALLATION GUIDE FOR EXTERIOR SHUTTERS

www.southernshutter.com

Take careful measurements.

It is important to measure your shutter pocket at the top and the bottom and on both sides, because window frames may not always be square.

Remember to *measure* and *remeasure* to verify your numbers before selecting your shutters and the desired mounting procedure.

Select the best mounting & hardware options.

Terminology

- **Shutter Pocket** - Opening into which the shutters close.
- **Pintel** - Part of the hinge set that attaches to the house.
- **Strap** - Part of the hinge set that attaches to the shutter.
- **Siding Material** - Material that is used on the house i.e. brick, plank, stucco.
- **Return Depth** - The distance in inches, from the window sash to the outer edge of the structure.
- **Hinge Throw** - The pintel offset plus the strap offset. The distance needed for the shutter to clear the structure when in the open position (see Inside Mount: Recessed Trim Pocket - A).
- **Pintel Offset** - The distance in inches, between the plate that screws to the house and the pin that the strap sits on (see Inside Mount: Recessed Trim Pocket - B).
- **Strap Offset** - The distance in inches, from the pintel pin to the inner part of the shutter.

Questions that must be answered.

- What type of siding is on the house around the window? Ex. Brick, stucco, stone, plank, vinyl ...
- What type of moulding (180 brickmould, 1x4 flat mold, etc.) is around the window or does the siding material butt up to the window with no trim board at all?
- What is the return depth in inches, from the outside edge of the trim board to the face of the sash itself?
- How deep is the pocket the shutter will close into.
- Where will the pintel be placed?

Quality hardware provides a quality installation.

Southern Shutter Company offers a complete line of quality hardware for any exterior application. Our hardware provides the finishing touch for your functional — as well as decorative —shutter installation.

For detailed measuring and mounting instructions, please visit our website www.southernshutter.com or call us at 1-800-344-8590.

INSIDE CASING MOUNT

INSIDE MOUNT: TRIMMED POCKET with wood or composite trim with appropriate depth for shutter pocket.

Note: Trim board must be as thick as the shutter, plus clearance for shutter rotation.

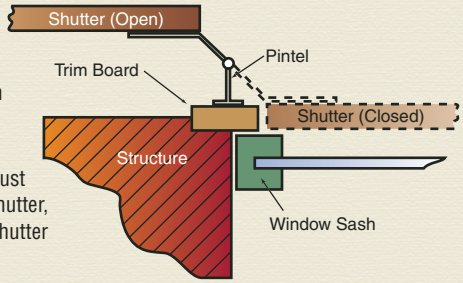

INSIDE MOUNT: BRICK OR MASONRY POCKET with appropriate depth for shutter pocket.

Note: Strap and Pintel are equal allowing shutter to close flush.

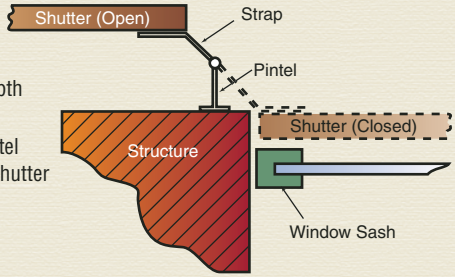

INSIDE MOUNT: RECESSED TRIM POCKET Allowing for closure inside window trim and throwing out and around structure.

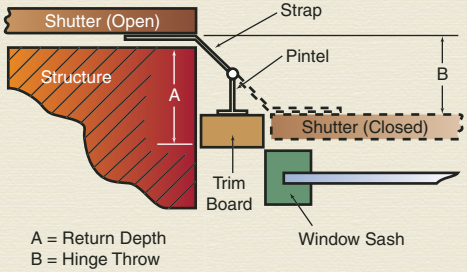

OUTSIDE CASING MOUNT
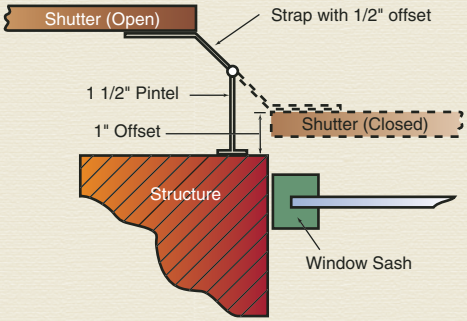
OUTSIDE MOUNT: NO POCKET with little or no depth for shutter pocket.